


Before you begin, check that the: -Door is closed -On/Off button (5) is in the OFF (OUT) position -Program Selector knob (1) is in a "Reset" position

Go From Wash To Dry Automatically!*

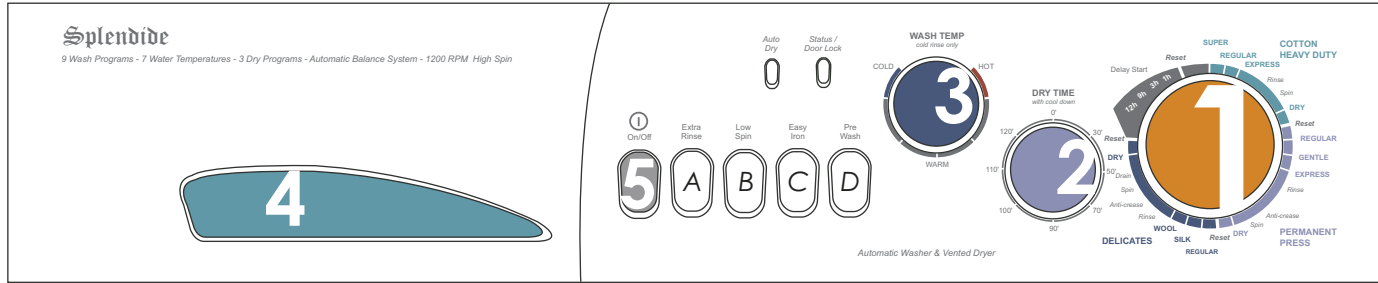


Select A Wash Program
Turn the program selector knob (1) clockwise until the program you want aligns with the mark on the knob.

IMPORTANT: Should you wish to interrupt a program in progress, advance the Program Selector knob (1) to a "Reset" position and wait 5 seconds.



Choose a Dry Time
To start drying automatically after washing select a dry time using the Dry Time knob (2). (Cool-Down not included).

IMPORTANT: Once set, this knob will not move during the dry cycle.

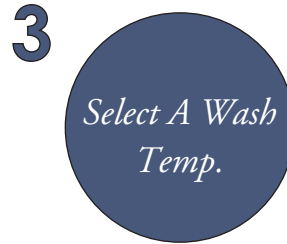


Select A Wash Temp.
Turn the Wash Temp. knob (3) to the temperature you want. The 7 selections range from HOT to COLD. Note: Rinse temperatures are always COLD.

Special Programs
Use buttons A, B, C, or D to run a Special program. If you don't wish to use these buttons, leave them in their OFF (OUT) position.



Add Laundry Aids
Pull the dispenser drawer (4) open and add your favorite laundry aids to the appropriately labeled compartments. When finished, close the drawer.

IMPORTANT: Use no more than 1-2 tbsp. of a High Efficiency (HE) powder detergent and 1-2 tbsp. of fabric softener per wash load.

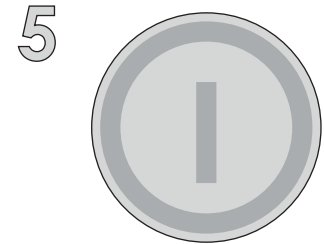

Press ON
Press the ON button (5) in. The Auto Dry LED will light if a dry time has been set. The Status/Door Lock LED will flash then light steady, indicating that the door is locked and the program will begin.

IMPORTANT: For your protection, the door will stay locked for the duration of the wash and dry cycles.

*See Opposite page for Wash ONLY and Dry ONLY Instructions

ATTENTION! Before operating your washer-dryer, read your owners manual. It contains important safety, operation, and maintenance information.

