

# Fabric Care Reference Guide

WD2100XC, WD2100XCP, WDC7100XC



**Your Space-Saving Laundry Solution Since 1984**

Forget about spending hours in strange laundromats. Simply throw a load of laundry in, set the controls, and relax. Your Splendide will go from wash to dry automatically - adding laundry aids right when they're needed! Read a magazine, prepare dinner, take a nap - let Splendide take care of the rest and return to incredibly clean, dry laundry!



No more laundromats! With Splendide, wash and dry laundry in the privacy and security of your own Home.



## Where's the filter?

Splendide's revolutionary new pump system eliminates the need for you to clean a filter! The only reason you should ever need to enter the pump pre-chamber (behind the toe-kick) is if items like keys or coins accidentally make their way into your wash load.

The fact is, your Splendide is so gentle on fabrics that very little lint is produced. The small amount of lint that accumulates is safely expelled through the drain (and out the vent in a vented model).



## How do my clothes get so clean with so little water?

Your Splendide uses the latest in washing technology and needs less than half the water to get wash results that are twice as good! An ENERGY STAR® product that's rated in the highest CEE® tiers, your Splendide uses just 7.5 -16\* gallons of water to effectively wash and rinse all your fabrics.

How? First, Splendide's revolutionary "Cascade" washing effect emulates the energetic motion of hand washing - cleaning clothes more thoroughly while treating fabrics gentler.

Meanwhile, Splendide's sophisticated "brain" watches over wash parameters like water level and foam control - making sure your clothes are the cleanest they can be when the wash cycle is complete. Because of these technological advances, your Splendide is rated at the top of it's class (Class A)\* in terms of energy efficiency AND wash performance!

\*Class A Norm EN 60456 Washing Machine



## Avoid Wrinkling Checklist

### Don't overload the drum

For best results, DO NOT load the drum more than 1/2 to 2/3 full when DRYING. Clothing should always have room to move freely.

### Don't load large and small items together

Always load items of similar size and weight. Remember, heavier fabrics, such as towels and denim jeans, may require extra room (and time) to dry.

### Don't add too much detergent

Use no more than 1-2 tablespoons of a High Efficiency (HE) detergent per wash load. Using too much detergent can cause fading, wrinkling, and deteriorate fabrics.

### Use fabric softener for automatic wash to dry

Use 1-2 tablespoons of fabric softener **OR** a detergent with a built-in softener so clothes fall easily from the drum after spinning.

### Avoid COLD Wash Temperatures

For fabrics that will allow it, use Warmer wash temperatures for the best wash results and to prevent fabric wrinkling.

### Dry clothing at a lower temperature

Always follow the cycle and temperature guidelines found on your clothing tags. For garments that require Medium or Low drying temperatures, choose Synthetics Dry with LOW HEAT pressed.

### Choose a cycle with a lower spin speed

Cotton Heavy Duty items dry faster using the 1200 RPM high spin. However, if you're not laundering items like jeans or towels, choose a Permanent Press cycle. For even lighter fabrics, choose a Permanent Press cycle with LOW SPIN pressed.

### Shake or fold items before drying

Give garments a quick shake and/or fold them when washing is complete, before starting the dry cycle. This keeps large items from remaining in a tight ball in the dryer - helping them dry faster and minimizing wrinkling.

### Remove items when the cycle is complete

Fold or hang your clothes when they are still hot from the dryer.

### Do not over dry your clothes

Never over dry your clothes. Take clothes out while they are still slightly damp. Over drying wastes energy, harms fabrics, causes wrinkling and shrinkage, and shortens fabric life.

### Before setting the controls, always make sure,

the drum is loaded correctly;  
the door is closed;  
the ON/OFF button has been pressed, so power is ON;  
laundry aids have been added to the Dispenser Drawer;  
the DOOR LOCK LED is flashing.

### How do I WASH ONLY:

Select the wash cycle, temperature and any wash options;  
set the dry time knob to the OFF position;  
press the START button.  
*When the WASH cycle ends, the machine will stop.*

### How do I DRY ONLY:

Set the Cycle selector to position 5, 10, or 13;  
select the length of drying time using the DRY TIME knob;  
press the START button.  
*When the DRY cycle ends, the machine will stop.*