 



# QUICK START

>>> For the very first cycle, run dryer **EMPTY** in Timed Dry for 20 to 30 minutes

## PREPARE TO DRY & SELECT A CYCLE

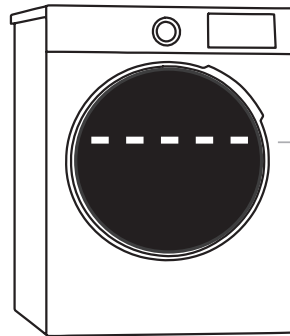


 Max. Load

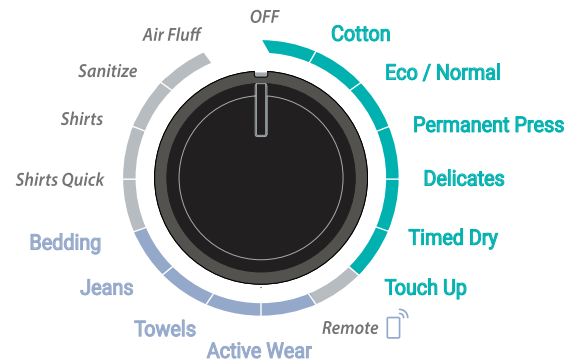

Estimated Time Remaining\*

Drying in Progress

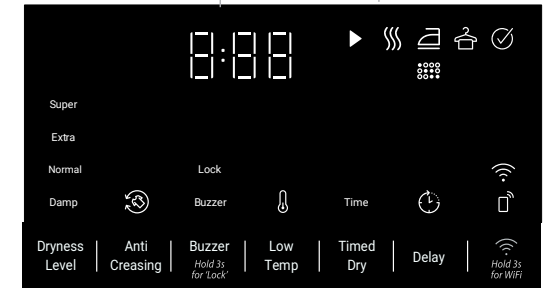

### Step 1: Load Your Laundry

- Shake out and untangle laundry before loading
- Don't overload — clothes need room to move
- Close the door firmly


### Step 2: Select a Cycle

- Rotate the Cycle Selector Knob to your desired dry cycle

### Step 3: Customize (optional)

- Adjust dry time/default dryness level or extra options (Anti Crease, Low Temp, etc.), if needed

## Your Dryer Offers Both Sensor and Timed Cycles

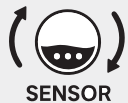

SENSOR

**SENSOR DRY CYCLES** stop when your chosen dryness level is reached (Extra, Normal, etc.)\*



**TIMED DRY CYCLES** (*Timed Dry and Air Fluff*) run for your selected time (10–160 minutes, set with the Timed Dry button) and stop automatically when time expires.

**NOTE:** \*Sensor drying times are approximate and may adjust during the cycle based on load conditions.

## START



### Step 4: Begin

- Press 'Start/Pause'
- When the cycle is complete, remove laundry promptly and turn the Cycle Selector to OFF.
- **DONE!**



## CHANGE / PAUSE / OR CANCEL A CYCLE

### To CHANGE a cycle in progress:

1. Press START/PAUSE
2. Rotate the dial to the new cycle
3. Press START/PAUSE again. *The new cycle will begin.*

### To PAUSE a cycle:

- Open the porthole door

### To CANCEL a cycle:

1. Press START/PAUSE
2. Rotate the dial to OFF

## WARNING

### WHEN ADDING/REMOVING ITEMS

- *When adding or removing clothes during a continuing program, DO NOT touch the inner surface of the drum. The drum surface may be HOT.*

**Splendide**  
*Laundry Centers*

[www.splendide.com](http://www.splendide.com)