 


QUICK START

 
>>> Before washing your first load, run an empty 'Tub Fresh' cycle to clean the washer drum

PREPARE TO WASH

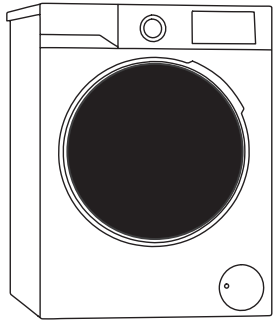

Step 1: Load Your Laundry

- Mix large and small items for balance
- Don't overload — clothes need room to move
- Close the door firmly

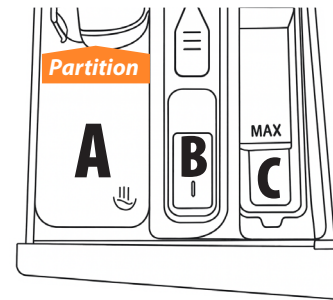


Step 2: Add Laundry Aids to Dispenser

- A. Laundry Detergent
Powder (*partition UP*), or
Liquid (*partition DOWN*)
- B. Liquid Fabric Softener
- C. Liquid Chlorine Bleach
When green insert is in
place. (*Take green insert
out when not using*)

Use 1-2 TBSP of HE powder detergent (or liquid equiv.)
Splendide Premium Laundry Powder (#1005) available.
To order, call 1-800-356-0766.

 
SELECT A CYCLE

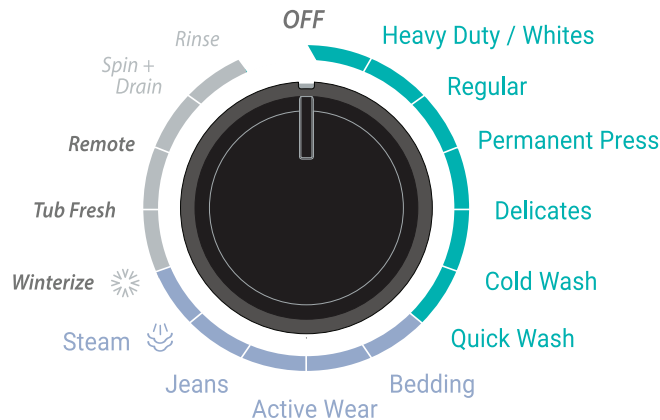

Step 3: Select a Cycle

- Rotate the Cycle Selector Knob to your desired wash cycle

 * Door Lock indicator

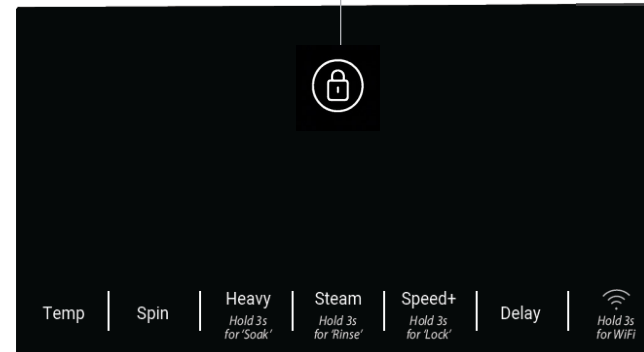

Step 4: Customize (optional)

- Press to adjust default water temperature and spin speeds
- Select extra options (Heavy, Rinse, etc.)

START



Step 5: Begin

- Press 'Start/Pause'
- The door locks and the cycle begins
- When finished, the door unlocks automatically*
- Remove laundry promptly and turn the Cycle Selector to OFF.

DONE!

IMPORTANT: * Always wait for the Door Lock indicator light to turn OFF before attempting to open the door. There may be a delay as the machine adjusts water and temperatures to safe levels.

WINTERIZE

DE-WINTERIZE



CHANGE / PAUSE / OR
CANCEL A CYCLE

If you're already pumping antifreeze through your RV's fresh water system, follow these steps to protect your washer for winter:

1. Set up the washer



- Winterize all faucets, shower heads, exterior showers, and toilets first. Remove the bleach container from the detergent compartment.

2. Start the Winterize cycle

- Turn the cycle selector to Winterize and press the Start/Pause button to begin.

3. Confirm that antifreeze is entering the drum

- The machine will fill three times. Open the detergent drawer and visually confirm that antifreeze (colored liquid) enters during each phase:

- First 20 seconds: Detergent compartment
- Next 20 seconds: Bleach compartment
- Final 20 seconds: Detergent compartment again

4. Repeat if necessary - If antifreeze does not appear in all three phases, repeat steps two and three.

5. Finish up

- If antifreeze appears in all phases, rotate the Cycle Selector to OFF.
- Wipe down the washer, and
- leave the door open for winter storage.



TO PREVENT ODORS,
LEAVE WASHER
DOOR AJAR WHEN IN
STORAGE/ NOT IN USE

TIP

When you're ready to use your washer again after storage, follow these steps to flush out the antifreeze and prepare it for normal operation:

1. Set up the washer



- Dewinterize all faucets, shower heads, exterior showers, and toilets first.

2. Start the Winterize cycle

- Turn the Cycle Selector to Winterize and press the Start/Pause button to begin.

3. Confirm that CLEAR water is entering the drum

- The machine will fill three times. Open the detergent drawer and visually confirm that water enters during each phase:

- First 20 seconds: Detergent compartment
- Next 20 seconds: Bleach compartment
- Final 20 seconds: Detergent compartment again

4. Repeat if necessary - If water does not appear in all three phases, or does not run clear, repeat steps two and three.

5. Flush the system

- Run a Regular cycle with warm water and no laundry in the drum to fully flush the system.
- Turn the Cycle Selector to Regular and press the Start/Pause button to begin.

6. Finish up

- While the Regular cycle is running, check for leaks
- Inspect the hose connections and the dispenser drawer to make sure everything is water tight.
- Once the Regular cycle is complete, the system is flushed and clear. Your washer is ready for everyday use again.

To CHANGE a cycle in progress:

1. press START/PAUSE
2. Rotate the Cycle Selector to the new cycle
3. Press Start/Pause again. *The drum will drain before the new cycle begins.*

To PAUSE a cycle:

- Press START/PAUSE once, then check the Door Lock indicator (see below)

To CANCEL a cycle:

- Turn the Cycle Selector to **ANY other cycle**, then check the Door Lock indicator (see below)



DOOR LOCK INDICATOR

» **FLASHING:** The washer is unlocking (*may take up to 2 minutes*)

» **OFF:** The door can be safely opened

» **SOLID:** The door is locked and will NOT open.

NOTE: If the drum is too hot or contains too much water, the door will remain locked.

To open the LOCKED door:

Press Start/Pause to resume the cycle, or turn the Cycle Selector to SPIN + DRAIN then press START/PAUSE to empty the drum.

Splendide
Laundry Centers

www.splendide.com