

# General Information


## Model / Serial No. Designators

This guide covers 'M' models (Serial #'s beginning with 9616 to 205). Use these numbers to obtain the Warranty status as well as a history of repairs and service calls for the washer-dryer. To speed the repair process, ALWAYS have the Model and Serial No. ready when you call Westland Sales.

<b>Model Number</b>	<b>WD</b>	<b>C</b>	<b>1025MCEE</b>
PRODUCT GROUP WD = Washer-Dryer			
PRODUCT IDENTIFICATION C = Condenser Drying System (Ventless model)			
DRUM VOLUME CODE 802M/1024M = 1.5 cu. ft. 1025M/1025MCEE = 1.9 cu. ft.			

<b>Serial Number</b>	<b>PFLP</b>	<b>00</b>	<b>27</b>	<b>0697</b>
YEAR OF MANUFACTURE				
WEEK OF MANUFACTURE				
PRODUCT SEQUENCE NUMBER				

*NOTE: When searching the Splendide Warranty Database, add a '6' or a '2' to the front of the serial number for the following models*  
 WDC1024M=2      WDC1025M/MCEE=6

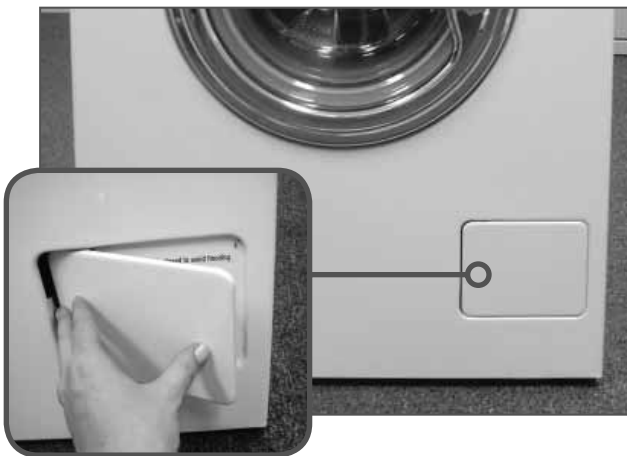

**Model Number**

**Serial Number**

## Warranty Guide\*

Refer to this page for a brief summary of the Product Warranties available by Splendide.

Wty Length	Splendide Will Pay For	Splendide WILL NOT Pay For
<p><b>MFR 1-YEAR</b> From Date of Purchase</p>	Replacement parts ONLY.	<p><b>A.</b> Repairs when the washer-dryer is used in other than normal, single-family use.</p> <p><b>B.</b> Pickup and delivery. The washer-dryer is designed to be repaired on-site.</p> <p><b>C.</b> Removal/replacement of washer-dryer from built-in or cabinet installations.</p>
<p><b>LIMITED 2-YEAR</b> From Date of Purchase  (Not available for some models)</p>	For two years from the date of purchase WHEN product is registered. Limited replacement parts and repair labor costs. Coverage starts 61 days after the completed warranty registration card is received by Westland Sales.	<p><b>D.</b> Damage to the washer-dryer caused by accident, alterations, misuse, abuse, fire, flood, acts of God, or use of products not approved by Splendide.</p> <p><b>E.</b> Repairs to parts or systems resulting from unauthorized modifications made to the washer-dryer.</p>
<p><b>LIMITED 5-YEAR</b> From Date of Purchase  (Not available for some models)</p>	For five years from the date of purchase WHEN extended Protection Plan is purchased. Limited replacement parts and repair labor costs. Coverage starts 61 days after the full payment is received by Westland Sales.	<p><b>F.</b> Replacement parts or repair labor costs not pre-approved by Splendide and/or provided by an unauthorized service company.</p> <p><b>G.</b> Service calls to correct the installation of the washer or to instruct you how to use it.</p> <p><b>H.</b> Plastic parts and cosmetic pieces.*</p>

### \*IMPORTANT!

This chart should be used ONLY as a guide and DOES NOT supersede the Warranty Statement. For complete information, refer to the Warranty Statement that came with the appliance.

## Washer-Dryer Specifications

The following is a list of product specifications for the Splendide Models covered in this Training Guide.

Model Number	WD802M	WDC1025M	WDC1025MCEE**	WDC1024M
<b>COLOR</b>	White	White	White	White
<b>DRYER TYPE</b>	Vented	Ventless	Ventless	Ventless
<b>ELECTRICAL REQ.</b>				
Max. Current	13A	13A	13A	13A
Rated Current	15 A	15A	15A	15 A
Voltage	115V	115V	115V	115V
Frequency	60Hz	60Hz	60Hz	60Hz
Heating Power	1300W	1300W	1300W	1300W / 900W
<b>GALLONS WATER/Wash Cycle*</b>	12-25 Gal.	12-25 Gal.	12-25 Gal.	12-25 Gal.
<b>CAPACITY</b>				
Wash	10 lb.	12 lb.	12 lb.	10 lb.
Dry	6 lb.	6 lb.	6 lb.	4 lb.
<b>MAX SPIN SPEED</b>	1000 RPM	1000 RPM	1000 RPM	1000 RPM
Height	33 1/4"	33 1/4"	33 1/4"	33 1/4"
Width	23 1/2"	23 1/2"	23 1/2"	23 1/2"
Depth	22"	22"	22"	18 1/2"
<b>WEIGHT</b>	185 lb.	185 lb.	185 lb.	175lb.
<b>PROGRAMS</b>				
Wash	5 Cycles	5 Cycles	5 Cycles	5 Cycles
Dry (Button)	2 Temp	2 Temp	2 Temp	2 Temp
<b>WASH TEMPERATURES</b>	5 Options	5 Options	3 Options	5 Options
<b>OPTIONS</b>	3 Buttons	3 Buttons	4 Buttons	3 Buttons

\*Water usage varies depending on load size and fabric type. 220V, 50Hz export models available.

\*\*This model contains the following notable differences from the other models described in this guide,

- Control Panel Differences: "Half Water/High Water" button, 3 Wash/Rinse Temperatures
- Internal Differences: a different pressure switch, water temperature selector.

**NOTE:** WDC1025M/MCEE and WDC1024M models have condenser (ventless) drying systems. Condenser drying systems use 5 gallons of cold water per hour during the dry cycle.

# IMPORTANT General Safety Information



Your safety is important. Read this section before you continue.



Important safety messages can be found in this manual and on the appliance. Always read and obey all safety messages.





This is a safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and the word "WARNING."

The safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

 <b>WARNING</b>	
	<b>ELECTRICAL SHOCK HAZARD</b> <b>Disconnect power before servicing.</b> <b>Replace all panels before operating.</b> <b>Failure to do so can result in death or electrical shock.</b>

 <b>WARNING</b>	
	<b>EXCESSIVE WEIGHT HAZARD</b> <b>Use two or more people to move and install the washer-dryer.</b> <b>Failure to do so can result in back or other injury</b>

 <b>WARNING</b>	
	<b>ELECTRICAL SHOCK HAZARD</b> <b>Plug washer-dryer into a grounded 3 prong outlet.</b> <b>Do not remove ground prong.</b> <b>Do not use adapter.</b> <b>Do not use an extension cord.</b> <b>Failure to follow these instructions can result in death, fire, or electrical shock.</b>

## Electrostatic Discharge (ESD)

### Sensitive Electronics

ESD problems are present everywhere. ESD may damage or weaken the electronic control assembly. The new control assembly may appear to work well after repair is finished, but failure may occur at a later date due to ESD stress.

- Use an antistatic wrist strap. Connect the wrist strap to a green ground connection point or unpainted metal in the appliance; or touch your finger repeatedly to a green ground connection point or unpainted metal in the appliance.
- Avoid touching electronic parts or terminal contacts.