

# General Information

## Model / Serial No. Designators

Use these numbers to obtain the Warranty status as well as a history of repairs and service calls for the washer-dryer.  
To speed the repair process, ALWAYS have the Model and Serial No. ready when you call Westland Sales.

<b>Model Number</b>	<b>WD</b>	<b>C</b>	<b>6200CEE</b>
PRODUCT GROUP WD = Washer-Dryer			
PRODUCT IDENTIFICATION C = Condenser Drying System (Ventless model)			
DRUM VOLUME CODE 2000S & 5200 = 1.6 cu. ft. 2100 & 6200 = 1.92 cu. ft.			

<b>Serial Number</b>	<b>S/N</b>	<b>3</b>	<b>07</b>	<b>14</b>	<b>3277</b>
YEAR OF MANUFACTURE					
MONTH OF MANUFACTURE					
DAY OF MANUFACTURE					
PRODUCT SEQUENCE NUMBER					



## Warranty Guide\*

Refer to this page for a brief summary of the Product Warranties available by Splendide.

Wty Length	Splendide Will Pay For	Splendide WILL NOT Pay For
<b>MFR 1-YEAR</b> <i>From Date of Purchase</i>	Replacement parts ONLY.	<b>A.</b> Repairs when the washer-dryer is used in other than normal, single-family use. <b>B.</b> Pickup and delivery. The washer-dryer is designed to be repaired on-site. <b>C.</b> Removal/replacement of washer-dryer from built-in or cabinet installations. <b>D.</b> Damage to the washer-dryer caused by accident, alterations, misuse, abuse, fire, flood, acts of God, or use of products not approved by Splendide. <b>E.</b> Repairs to parts or systems resulting from unauthorized modifications made to the washer-dryer. <b>F.</b> Replacement parts or repair labor costs not pre-approved by Splendide and/or provided by an unauthorized service company. <b>G.</b> Service calls to correct the installation of the washer or to instruct you how to use it. <b>H.</b> Plastic parts and cosmetic pieces.*
<b>LIMITED 2-YEAR</b> <i>From Date of Purchase</i> <i>(Not available for some models)</i>	For two years from the date of purchase WHEN product is registered. Limited replacement parts and repair labor costs. Coverage starts 60 days after the completed warranty registration card is received by Westland Sales.	
<b>LIMITED 5-YEAR</b> <i>From Date of Purchase</i> <i>(Not available for some models)</i>	For five years from the date of purchase WHEN extended Protection Plan is purchased. Limited replacement parts and repair labor costs. Coverage starts 60 days after the full payment is received by Westland Sales.	

### \*IMPORTANT!

*This chart should be used ONLY as a guide and DOES NOT supersede the Warranty Statement. For complete information, refer to the Warranty Statement that came with the appliance.*

## Washer-Dryer Specifications

The following is a list of product specifications for the Splendide Models covered in this Training Guide.

Model Number	WD2100	WD2000S	WDC6200CEE	WDC5200
<b>COLOR</b>	White	White	White	White
<b>DRYER TYPE</b>	Vented	Vented	Ventless	Ventless
<b>ELECTRICAL REQ.</b>				
Max. Current	13A	13A	13A	13A
Rated Current	15 A	15 A	15 A	15 A
Voltage	120V	120V	120V	120V
Frequency	60Hz	60Hz	60Hz	60Hz
Heating Power	1300W	1300W	1300W	1300W
<b>GALLONS WATER/Reg. Cotton Heavy Duty Cycle*</b>	7.5 Gal.	7.5 Gal.	7.5 Gal.	7.5 Gal.
<b>CAPACITY</b>				
Wash	12 lb.	10 lb.	12 lb.	10 lb.
Dry	8 lb.	6 lb.	8 lb.	6 lb.
<b>MAX SPIN SPEED</b>	1200 RPM	1200 RPM	1200 RPM	1200 RPM
Height	33 1/4"	33 1/4"	33 1/4"	33 1/4"
Width	23 1/2"	23 1/2"	23 1/2"	23 1/2"
Depth	23 3/8"	22 3/16"	24 1/4"	18 1/4"
<b>WEIGHT</b>	161 lb.	150 lb.	161 lb.	139 lb.
<b>PROGRAMS</b>				
Wash	9 Cycles	9 Cycles	9 Cycles	9 Cycles
Dry	3 Cycles	3 Cycles	3 Cycles	3 Cycles
<b>WASH TEMP OPTIONS</b>	7	7	7	7
<b>SPECIAL WASH OPTIONS</b>	5 buttons	5 buttons	5 buttons	5 buttons

\*Avg. wash water use is 9-16 gal/wash load. Water usage varies depending on load size and fabric type.

**NOTE:** WDC6200CEE and WDC5200 models have condenser (ventless) drying systems. Condenser drying systems use 5 gallons of cold water per hour during the dry cycle.

## IMPORTANT General Safety Information



*Your safety is important. Read this section before you continue.*



Important safety messages can be found in this manual and on the appliance. Always read and obey all safety messages.





This is a safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and the word "WARNING."

The safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

 <b>WARNING</b>	
	<b>ELECTRICAL SHOCK HAZARD</b> <b>Disconnect power before servicing.</b> <b>Replace all panels before operating.</b> <b>Failure to do so can result in death or electrical shock.</b>

 <b>WARNING</b>	
	<b>EXCESSIVE WEIGHT HAZARD</b> <b>Use two or more people to move and install the washer-dryer.</b> <b>Failure to do so can result in back or other injury</b>

 <b>WARNING</b>	
	<b>ELECTRICAL SHOCK HAZARD</b> <b>Plug washer-dryer into a grounded 3 prong outlet.</b> <b>Do not remove ground prong.</b> <b>Do not use adapter.</b> <b>Do not use an extension cord.</b> <b>Failure to follow these instructions can result in death, fire, or electrical shock.</b>

### Electrostatic Discharge (ESD)

#### Sensitive Electronics

ESD problems are present everywhere. ESD may damage or weaken the electronic control assembly. The new control assembly may appear to work well after repair is finished, but failure may occur at a later date due to ESD stress.

- Use an antistatic wrist strap. Connect the wrist strap to a green ground connection point or unpainted metal in the appliance; or touch your finger repeatedly to a green ground connection point or unpainted metal in the appliance.
- Avoid touching electronic parts or terminal contacts. Handle the Module Board by the plastic housing ONLY.