

## **#SK02 STACK KIT MOUNTING INSTRUCTIONS AND PATTERN**


FOR USE WITH AS66VX 110V ELECTRIC DRYER & AW122 FRONT-LOADING WASHER

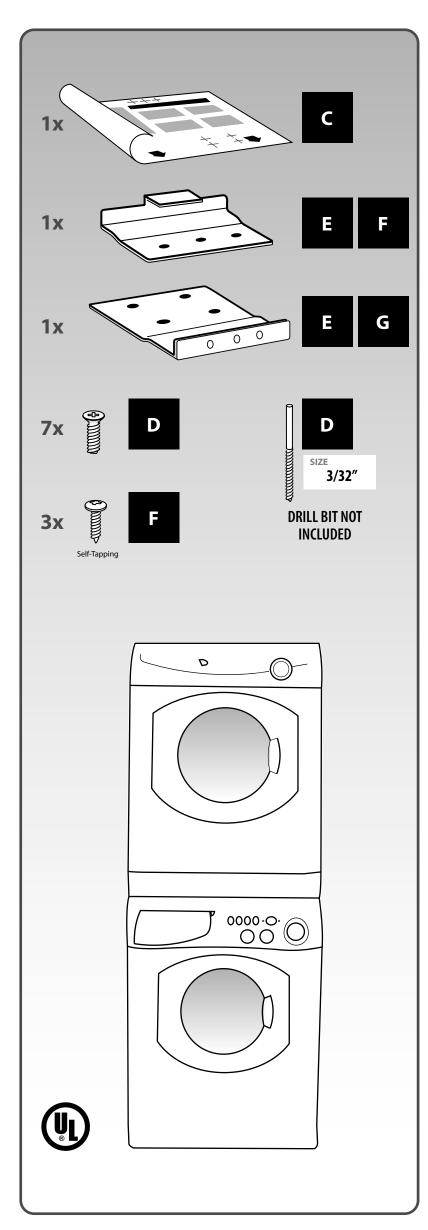


© Copyright 2006, Westland Sales 15650 SE 102nd Ave. Clackamas, OR 1-800-356-0766 www.westlandsales.com

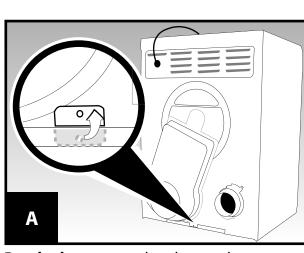

Bend tab up so rear bracket can be inserted later

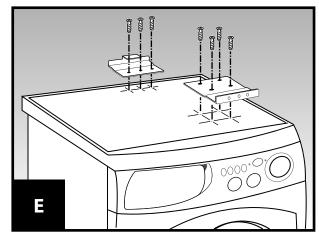


Secure brackets to washer top

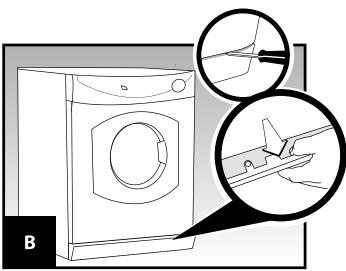



Remove dryer kick-plate


ALIGN WITH CENTER-LINE OF WASHER TOP

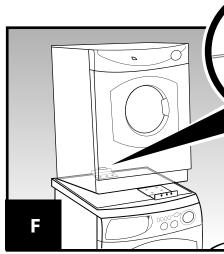


Insert rear bracket into dryer

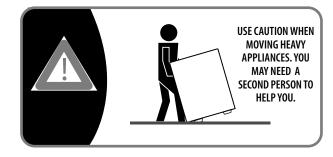


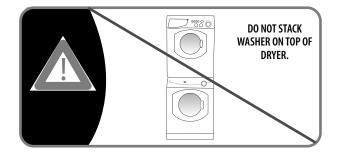

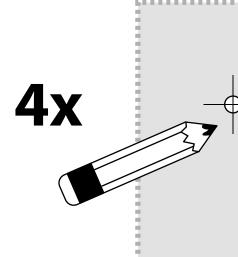







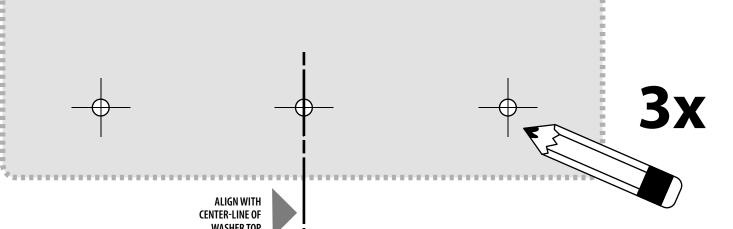


THIS KIT IS INTENDED TO PROVIDE FOR EASIER INSTALLATION AND REMOVAL OF THE WASHER AND DRYER IN CLOSE-FITTING RV AND MARINE INSTALLATIONS. THIS KIT MAY ALSO BE USED TO SECURE THE DRYER ON TOP OF A STURDY, WOODEN SHELF.

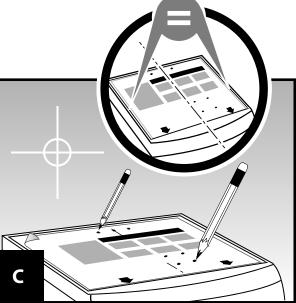


Use pattern to mark drill hole positions on washer top

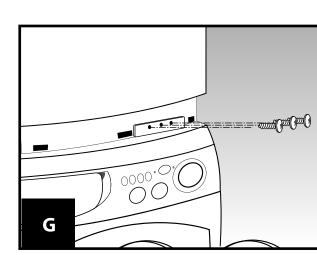


Secure front bracket to dryer

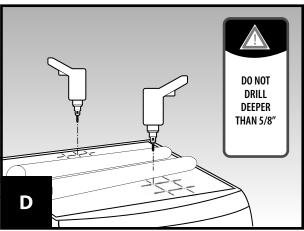


Drill holes into washer top

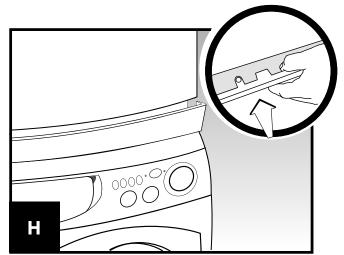

Reinstall dryer kick-plate

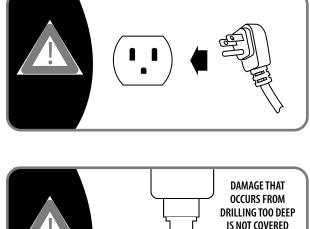

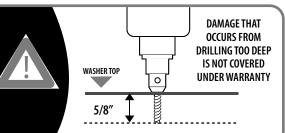

**USE ONLY SCREWS FROM KIT** 

