



SK04T MOUNTING INSTRUCTIONS

Optional accessory - for use with: **WFL2500X** Washer and **DV1725X** Dryer

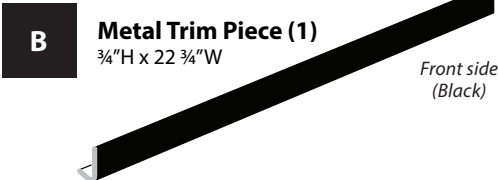


Step 1

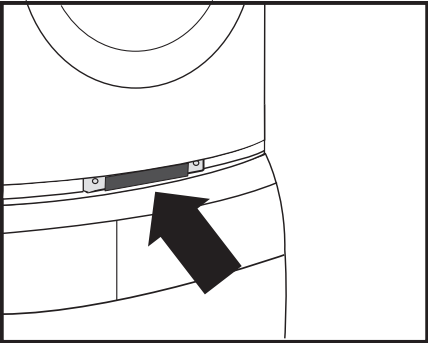

- Peel away one side of the adhesive backing from the **Velcro strip (A)**.
- Position the adhesive side of the strip between the two screws on the **front mounting bracket (SK04)** and press firmly to secure.

Step 2

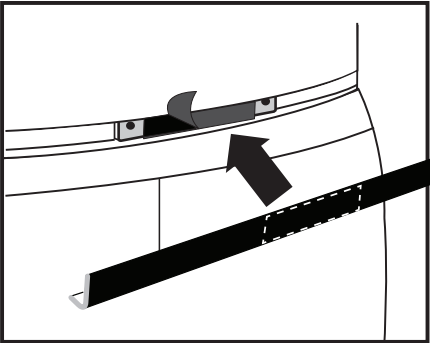


- Peel away the remaining adhesive backing from the **Velcro strip (A)**.
- Position the **metal trim piece (B)** and press firmly to secure it to the Velcro strip.

Step 3

- Verify that the **SK04T metal trim piece (B)** completely covers the stack kit and is **properly aligned**.

Installation complete.

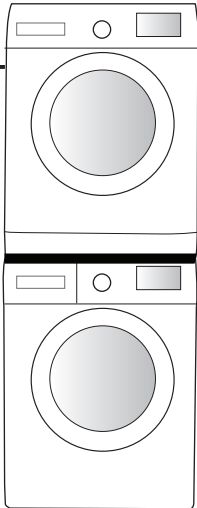


SK04T MOUNTING INSTRUCTIONS

Optional accessory - for use with: **WFL2500X** Washer and **DV1725X** Dryer




Step 1

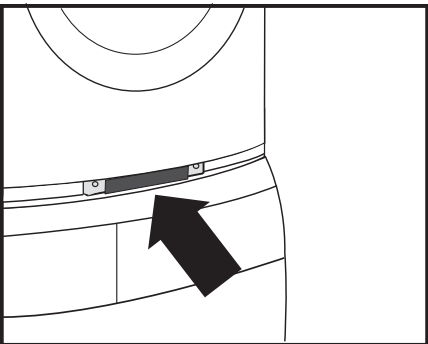

- Peel away one side of the adhesive backing from the **Velcro strip (A)**.
- Position the adhesive side of the strip between the two screws on the **front mounting bracket (SK04)** and press firmly to secure.

Step 2

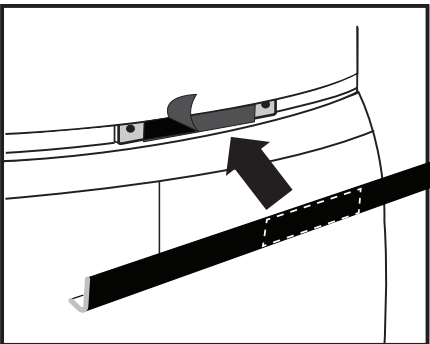

- Peel away the remaining adhesive backing from the **Velcro strip (A)**.
- Position the **metal trim piece (B)** and press firmly to secure it to the Velcro strip.

Step 3

- Verify that the **SK04T metal trim piece (B)** completely covers the stack kit and is **properly aligned**.

Installation complete.

