


Align template to
rear edge of recess

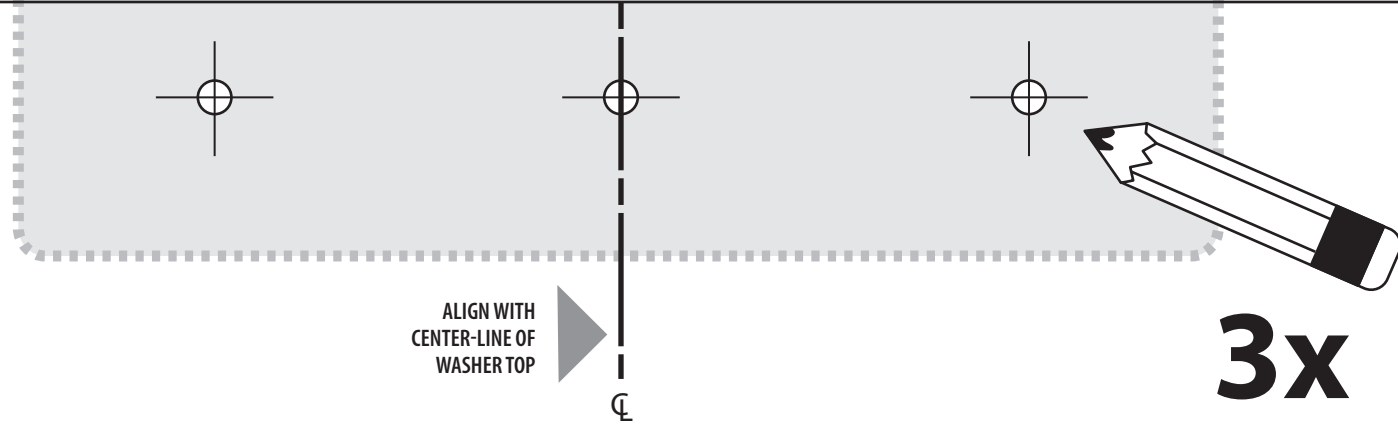

Align template to
rear edge of recess




Recess


Rear of washer top
(Side view)

SK04 STACK KIT MOUNTING INSTRUCTIONS & PATTERN

For use with DV1725X DRYER and WFL2500X WASHER

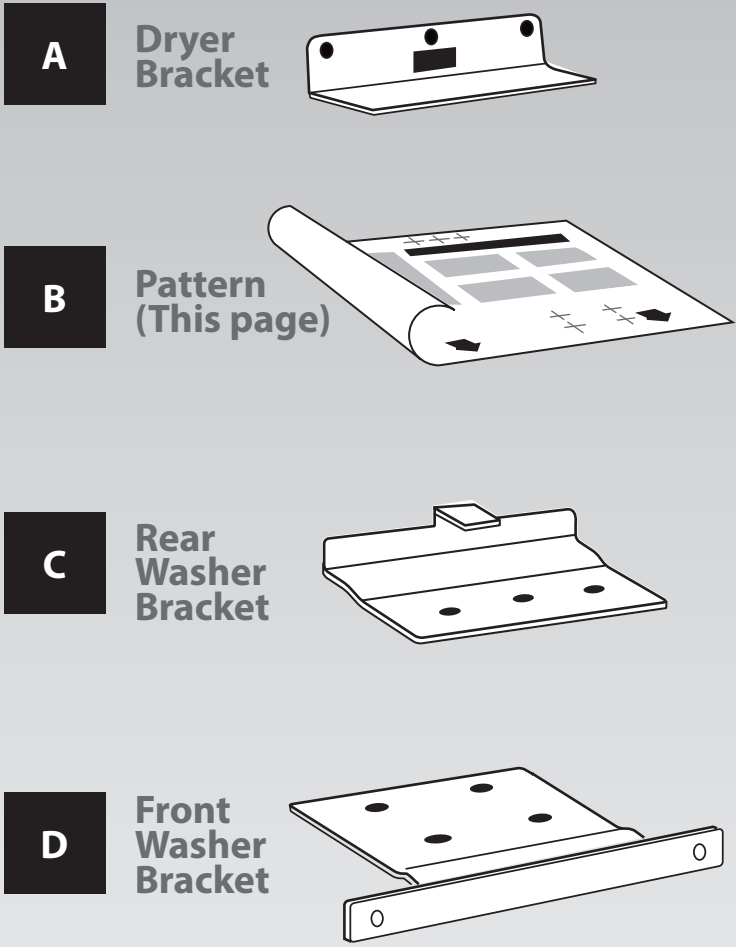

DV1725X Dryer

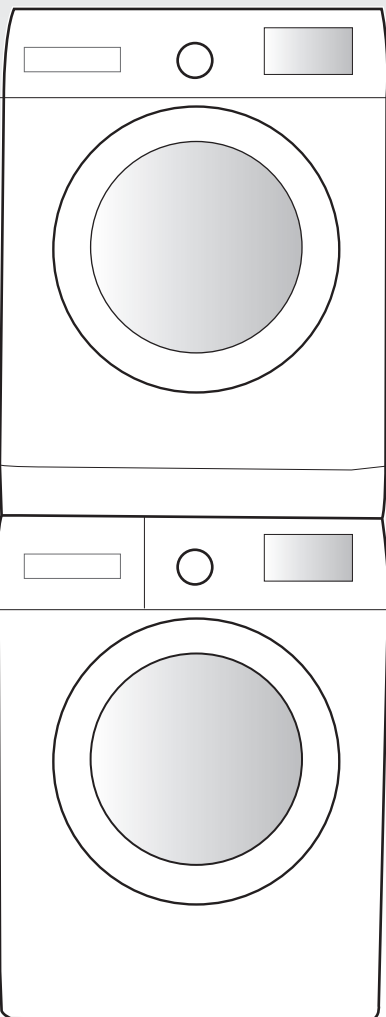

WFL2500X Washer

Included
Screws

7x



USE ONLY SCREWS
FROM KIT




SIZE
3/32"

DRILL BIT NOT
INCLUDED*




STEP 1

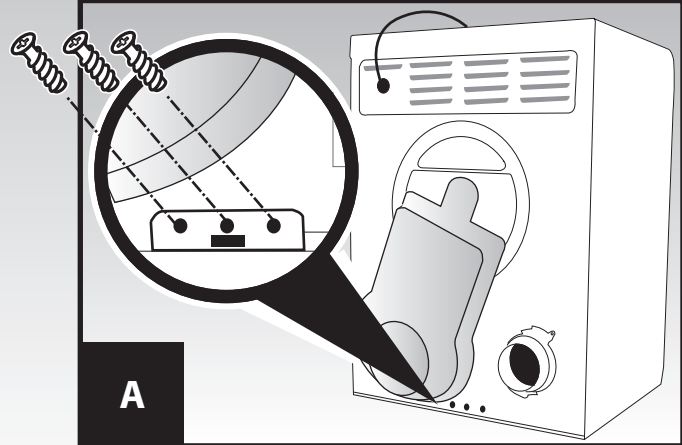


MOUNT the DRYER BRACKET at the
bottom-rear of the dryer using the
three existing holes at the base (use 'E'
screws provided)

2

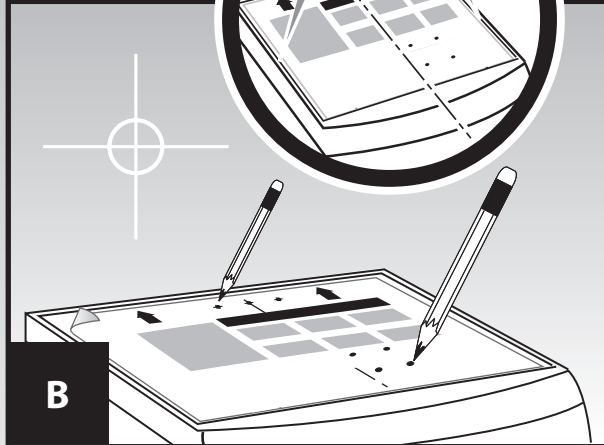


ALIGN the PATTERN on the washer top and
MARK the seven positions for drilling

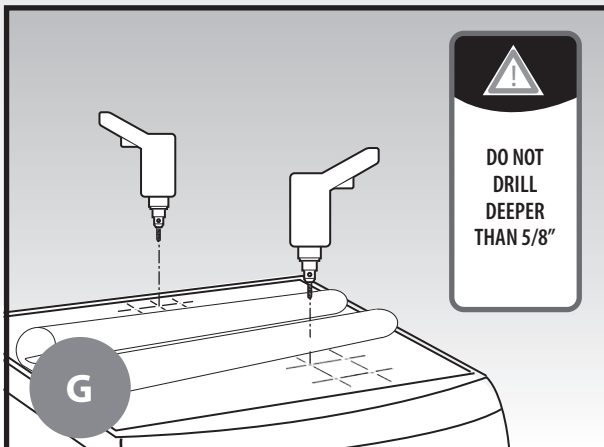

USE these marks to DRILL seven holes into
the washer top* (see WARNING below)

3

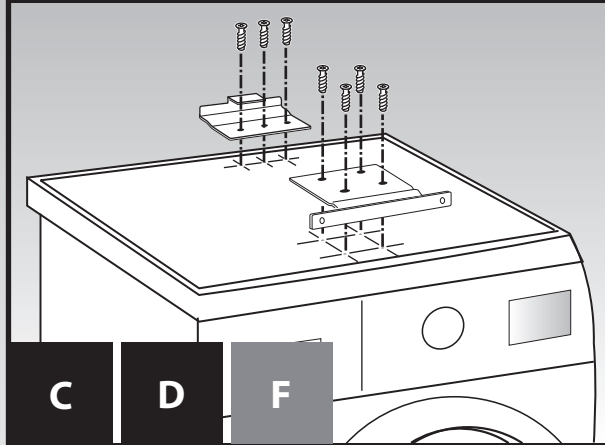


MOUNT the WASHER BRACKETS to the
washer top (use 'F' screws provided)



HOOK the REAR WASHER BRACKET into
the DRYER BRACKET

4

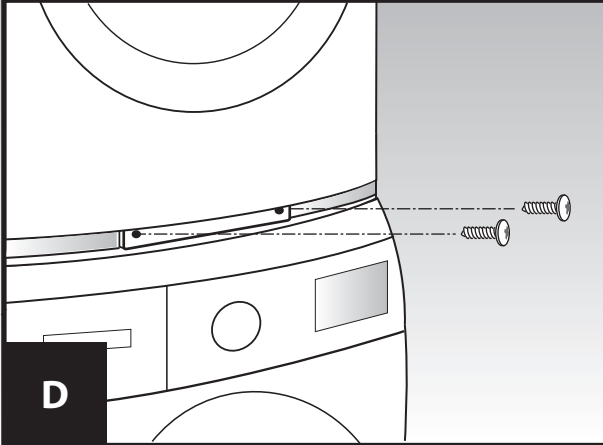

SECURE the FRONT WASHER BRACKET to
the dryer using the two existing holes in
the dryer base (use 'E' screws provided)

IMPORTANT NOTE FOR RV/MOBILE INSTALLS:

In a mobile environment, ADDITIONAL
bracing or brackets are required to
securely anchor the washer and dryer -
to prevent movement while the vehicle
is in motion.

