

Splendide

TECHNICAL EDUCATION
GROUP PRESENTS



Front-Loading Automatic Washer-Dryer

Pump Gasket Replacement/Lubrication Kit

Tech Tip No. 1055

KIT INCLUDES

- 1 Replacement Pump Gasket #116509746G
- 1 Bag of Pump Lubricant

YOU'LL NEED

- 1 Pair of Scissors
- 1 Flat Head Screwdriver

MODELS

- WD802, 802M (Splendide 2000)
- WDC1024, 1024M (Comb-o-matic 2000)
- WDC1025 (Comb-o-matic 6000)
- WDC1025MCEE (Comb-o-matic 6100)

QUESTIONS?

Splendide Service Headquarters:

Westland Sales
15650 SE 102nd Ave. (PO BOX 427)
Clackamas, OR 97015

Telephone: 800-356-0766 (503-655-2563)





Service Fax: (503) 722-9202

Service E-mail: service@splendide.com

Website: www.splendide.com

Pump Gasket Replacement/Lubrication Kit

Follow these instructions carefully to assure the Pump Gasket #116509746G is replaced properly

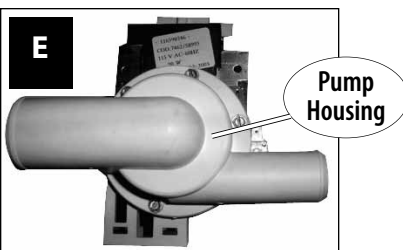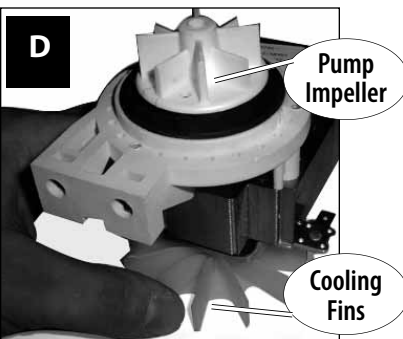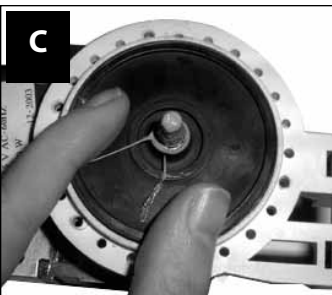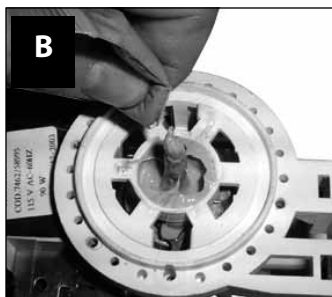

After removing and the old Pump Gasket, follow these steps to install the new Pump Gasket:

1. To apply the Pump Lubricant, first use scissors to make a small cut in the bottom-corner of the Pump Lubricant bag.
2. Cover the center hole of the Pump Gasket with one finger, then squeeze a liberal amount of Pump Lubricant into the other side of the hole (A).
3. Apply a generous amount of Pump Lubricant to the Motor Shaft (B).
4. Place the new Pump Gasket onto the Motor Shaft (C). **IMPORTANT: Make sure the numbers on the gasket are facing up. DO NOT wipe off excess lubricant.**

To Complete the Installation,

5. Replace the Pump Impeller by holding onto the Cooling Fins and turning the Pump Impeller clockwise (D).
6. Replace the Pump Housing. Use a Flat Head screwdriver to tighten the screws that hold the Pump Housing to the Pump Motor (E). **NOTE: Make sure the Pump Housing is facing the correct direction or the Hoses will not fit.**
7. Reinstall the Pump inside the Washer-Dryer.

The Pump Gasket installation is complete!